

Hot Keys Configuration for Viva – GNSS

- F7 : LINEWORK – Create new Line (quick)
- F8 : LINEWORK – Create new Area (quick)
- F9 : LINEWORK – Close all open Lines / Areas
- F10 : COGO Line & arc calculations
- F11 : COGO Intersection
- F12 : DATA – Create control data
- Fn + F7 : RAW DATA LOGGING SETTINGS (BASE)
- Fn + F8 : RAW DATA LOGGING SETTINGS (ROVER)
- Fn + F9 : INSTRUMENT CONNECTION SETTINGS (Applicable for Base & Rover)
- Fn + F10 : CHANGE RADIO CHANNEL / DIAL UP STATION.
- Fn + F11 : USER – SKETCH PAD.
- Fn + F12 : USER – TOUCH SCREEN ON/OFF.
- Fn + * + 1** : DATA – Choose Working Job
- Fn + * + 2** : DATA – Export ASCII Data
- Fn + * + 3** : DATA – Export DXF Data
- Fn + * + 4** : DATA – Import ASCII Data